



HTC Series

Low Profile, Efficient
Temperature Controllers



GENERAL DESCRIPTION

The advanced and reliable circuitry of the HTC series achieves 0.0009°C temperature stability. Its small, low profile package is ideal for designs with space constraints. The linear, PI control loop offers maximum stability while the bipolar current source has been designed for higher efficiency.

The HTC temperature controllers are easily configured for any design. Virtually any type of temperature sensor can be used with the HTC and a built in sensor bias current source simplifies use with resistive temperature sensors. The independently adjustable Proportional Gain (P) and Integrator Time Constant (I) can be modified to optimize temperature overshoot and stability.

Other features offer added flexibility. A single resistor sets the maximum output current to your load. Add a diode to operate resistive heaters with a unipolar output current. An onboard reference voltage simplifies potentiometer control of the temperature setpoint. You can also choose to operate remotely with an external setpoint voltage. Two monitor pins provide access to the temperature setpoint voltage and the actual sensor voltage.

FEATURES

- Compact Size - 1.5 and 3.0 Amp Models
- Interfaces with Thermistors, IC Sensors, & RTDs
- Single supply operation +5 V to +12 VDC (contact factory for higher voltage operation)
- +11 V compliance with +12 V input
- Stabilities as low as 0.0009°C
- Temperature Setpoint, Output Current Limit, Sensor Bias, Proportional Gain, and Integrator Time Constant are User Adjustable
- Monitor outputs for Temperature Setpoint and Actual Temperature
- Linear Bipolar or Unipolar Output operates thermoelectrics or resistive heaters

ORDERING INFORMATION

| Model | Description |
|--------------|--|
| HTC-1500 | 1.5 A Temperature Controller |
| HTC-3000 | 3.0 Amp Temperature Controller |
| PWRPAK-5V | +5V @ 8A Power Supply |
| PWRPAK-12V | +12V @ 3A Power Supply |
| HTCEVAL PCB | Evaluation Board (Includes HTC Heatsink) |
| HTC HEATSINK | Heatsink for HTC |
| THERM-PST | Thermal grease |

Figure 1
HTC Series Pin-Out, Top View

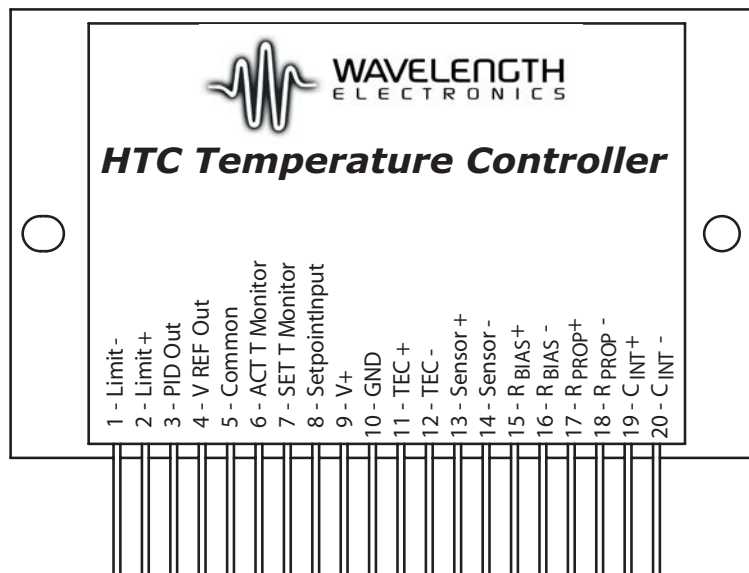


Figure 2
Quick Connect

This diagram shows HTC connections for basic operation. Details for each component are on pages 7 & 8.


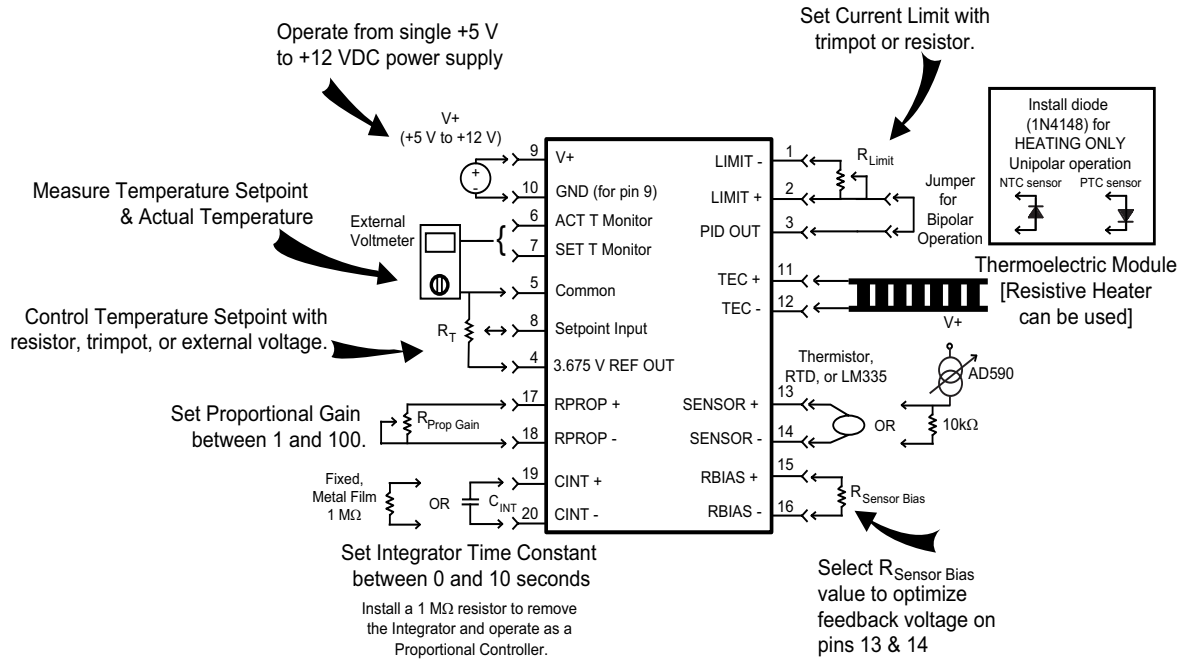


Figure 3
Dummy Load Configuration
(for confirming hookup and settings)

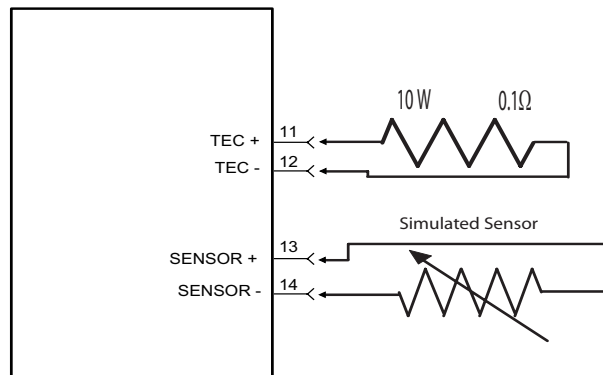


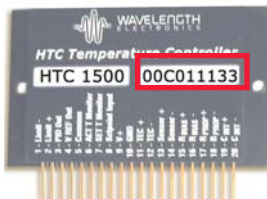

Values shown can simulate any load up to the HTC Series maximum of 3 A.

| ABSOLUTE MAXIMUM RATINGS | | SYMBOL | VALUE | UNIT | |
|--|----------------------------|---|--|--|-------|
| Supply Voltage (Voltage on Pin 9 - contact factory for higher V operation) ❶ | | V+ | +5 to +12 | Volts DC | |
| Output Current (See SOA Chart) | | I _{OUT} | ±1.5 (HTC1500) ±3.0 (HTC3000) | Amps | |
| Power Dissipation, T _{AMBIENT} = +25°C (See SOA Chart) | | P _{MAX} | 9 | Watts | |
| Operating Temperature, case | | T _{OPR} | 0 to +50 | °C | |
| Storage Temperature | | T _{STG} | -40 to +50 | °C | |
| OPERATING PARAMETER | TEST CONDITIONS | MIN | TYP | MAX | UNITS |
| TEMPERATURE CONTROL | | | | | |
| Short Term Stability (1-hr) ❷ | OFF ambient temperature | | 0.0009 | | °C |
| Short Term Stability (1-hr) ❷ | ON ambient temperature | | 0.002 | | °C |
| Long Term Stability (24-hr) ❷ | OFF ambient temperature | | 0.0015 | | °C |
| Control Loop | | P | PI | | |
| P (Proportional Gain) ❸ | | 1 | | 100 | A / V |
| I (Integrator Time Constant) ❹ | | 0 | | 10 | Sec. |
| Setpoint vs. Actual T Accuracy | Rev B | | <10% | | |
| | Rev C, D, & E | 0.2 | 2 | 5 | mV |
| OUTPUT, THERMOELECTRIC | | | | | |
| Current, peak, see SOA Chart | HTC1500 | ±1.4 | ±1.5 | ±1.6 | Amps |
| | HTC3000 | ±2.8 | ±2.9 | ±3.0 | Amps |
| Compliance Voltage, ❺ Pin 11 to Pin 12 | Full Temp. Range | I _{OUT} = 500 mA I _{OUT} = 1.5 A I _{OUT} = 3 A | V+ - 0.13 V+ - 0.75 V+ - 1.33 | | Volts |
| Temperature Range ❻ | | | | | |
| Current Limit Range ❸ (±2% FS Accuracy) | HTC1500 | | 0-1500 | | mA |
| | HTC3000 | | 0-3000 | | mA |
| Output Power ❷ contact factory for higher power operation | HTC1500 | | | 12 | Watts |
| | HTC3000 | | | 24 | |
| POWER SUPPLY | | | | | |
| Voltage, V+ ❾ | | | 5 | 12 | V |
| Current, VDD supply, quiescent | | | 200 | | mA |
| SENSORS | | | | | |
| Sensor Bias Current Range ❸ | | 1μ | | 10m | A |
| Resistive Sensor Type | Thermistors, RTDs | | | | |
| IC Sensor Types ❸ | AD590, LM335 | | | | |
| <p>❶ If thermistor, TE module, or laser diode are case common, the laser diode driver and TE controller power supplies must be isolated from each other.</p> <p>❷ Stability quoted for a typical 10 kΩ thermistor at 100 μA sensing current. Refer to TN-TC02 : <i>How is Temperature Stability Measured?</i> for details. (http://www.teamwavelength.com/downloads/notes/tn-tc02.pdf#page=1)</p> <p>❸ User configurable with external resistor.</p> <p>❹ User configurable with external capacitor.</p> <p>❺ Compliance voltage will vary depending on power supply voltage and output current. A compliance voltage of ±10.7 V will be obtained with +12 volts input at 3 A. A compliance voltage of ±3.7 V will be obtained with +5 V input and 3 A. +5 V operation will limit the setpoint voltage to 3.5 V, thus limiting the temperature range of the HTC. NOTE: Compliance voltage for Revision B was limited to ±8 volts for +12V input.</p> <p>❻ Temperature Range depends on the physical load, sensor type, input voltage, and TE module used.</p> <p>❼ Output power is limited by internal power dissipation and maximum case temperature. See SOA chart to calculate internal power dissipation. Damage to the HTC will occur if case temperature exceeds 50°C.</p> <p>❸ AD590 requires an external bias voltage and 10 kΩ resistor. Contact factory for higher voltage operation up to 30V</p> <p>❾ Contact factory for higher voltage operation up to 30V.</p> | | | | | |
| Size (H x W x D) 0.34" x 2.65" x 1.6" [8.6 x 67 x 41 mm] | Weight < 1.5 oz. | Connectors 20 pin header, 0.1" spacing | Required Heatsink Capacity 5.6 °C / W / 3 in | Warm-up 1 hour to rated accuracy | |

PIN DESCRIPTIONS

| PIN NO. | PIN | FUNCTION |
|---------|--------------------|---|
| 1 | LIMIT- | Resistor value of 0 Ω to 1 M Ω between pins 1 & 2 limits maximum output current. |
| 2 | LIMIT+ | |
| 3 | PID OUT | Short pins 2 & 3 for bipolar operation. Install diode for unipolar operation (see page 7, step 1 for polarity). |
| 4 | V REF OUT | 3.675 Volt Reference < 50 ppm stability (15 ppm typical) |
| 5 | COMMON | Measurement ground. Low current return used only with pins 6, 7, & 8. Internally shorted to pin 10. |
| 6 | ACT T MONITOR | Temperature monitor. Buffered measurement of voltage across Sensor + & Sensor -. [1 k Ω output impedance for Revisions B & D] |
| 7 | SET T MONITOR | Setpoint Voltage Monitor. Buffered measurement of the setpoint input (pin 8). [1 k Ω output impedance for Revisions B & D] |
| 8 | SETPOINT INPUT | Remote Setpoint voltage input. Input impedance = 1 M Ω . |
| 9 | V+ | Supply voltage input. +5 V to +12V. Contact Factory for higher voltage operation. |
| 10 | GND | Power Supply Ground. Used with pin 9 for high current return. |
| 11 | TEC+ | TEC+ & TEC- supply current to the TE module. With NTC sensors, connect TEC+ to positive lead of TE module. With PTC sensors, connect TEC- to positive lead of TE module. |
| 12 | TEC- | |
| 13 | SENSOR+ | A sensor bias current will source from Sensor+ to Sensor- if a resistor is tied across R _{BIAS+} and R _{BIAS-} . Connect a 10k Ω resistor across Sensor+ & Sensor- when using an AD590 temperature sensor. See page 7, step 4. |
| 14 | SENSOR- | |
| 15 | R _{BIAS+} | Resistance between pins 15 & 16 selects sensor current from 1 μ A to 10mA. Range is 0 Ω to 1 M Ω . |
| 16 | R _{BIAS-} | |
| 17 | R _{PROP+} | Resistance between pins 17 & 18 selects Proportional Gain between 1 & 100. Range is 0 Ω to 495 k Ω . |
| 18 | R _{PROP-} | |
| 19 | C _{INT+} | Capacitance between pins 19 & 20 sets the Integral Time Constant between 0 and 10 seconds. 0 seconds (OFF) = 1M Ω resistor 0.1 to 10 seconds = 0.1 μ F to 10 μ F. |
| 20 | C _{INT-} | |

REVISION HISTORY NOTES

| CHANGE: | REVISION B | REVISIONS C & D (April & July 2004) | REVISION E (July 2009) |
|--|---|--|---|
| Lot # Location (third digit indicates Revision) |  |  |  |
| Efficiency Increase: Compliance Voltage | V+ minus 3 to 4 V | | V+ minus 0.13 to 2.3 V |
| Setpoint vs. Actual accuracy | 10% | 5 mV | |
| Improved stability of Reference Voltage (pin 4) | | | |
| Temperature Stability: 1-hour OFF ambient | | | 0.0009 $^{\circ}$ C |
| 1-hour ON ambient | | | 0.002 $^{\circ}$ C |
| 24-hour OFF ambient | | | 0.0015 $^{\circ}$ C |

Caution:

Do not exceed the Safe Operating Area (SOA). Exceeding the SOA voids the warranty.

An online tool for calculating Safe Operating Area is available at:

<http://www.teamwavelength.com/support/calculator/soa/soatc.php>.

To determine if the operating parameters fall within the SOA of the device, the maximum voltage drop across the controller and the maximum current must be plotted on the SOA curves.

These values are used for the example SOA determination:

$$V_+ = 12 \text{ volts}$$

$$V_{\text{LOAD}} = 5 \text{ volts}$$

$$I_{\text{LOAD}} = 1 \text{ amp}$$

} These values are determined from the specifications of the TEC or resistive heater


Follow these steps:

1. Determine the maximum voltage drop across the controller, $V_+ - V_{\text{LOAD}}$, and mark on the X axis. (12 volts - 5 volts = 7 volts, Point A)
2. Determine the maximum current, I_{LOAD} , through the controller and mark on the Y axis: (1 amp, Point B)
3. Draw a horizontal line through Point B across the chart. (Line BB)
4. Draw a vertical line from Point A to the maximum current line indicated by Line BB.
5. Mark V_+ on the X axis. (Point C)
6. Draw the Load Line from where the vertical line from point A intersects Line BB down to Point C.

This chart assumes you have appropriately heatsunk the HTC.

HTC Safe Operating Area

25 °C Ambient
50 °C Case Maximum

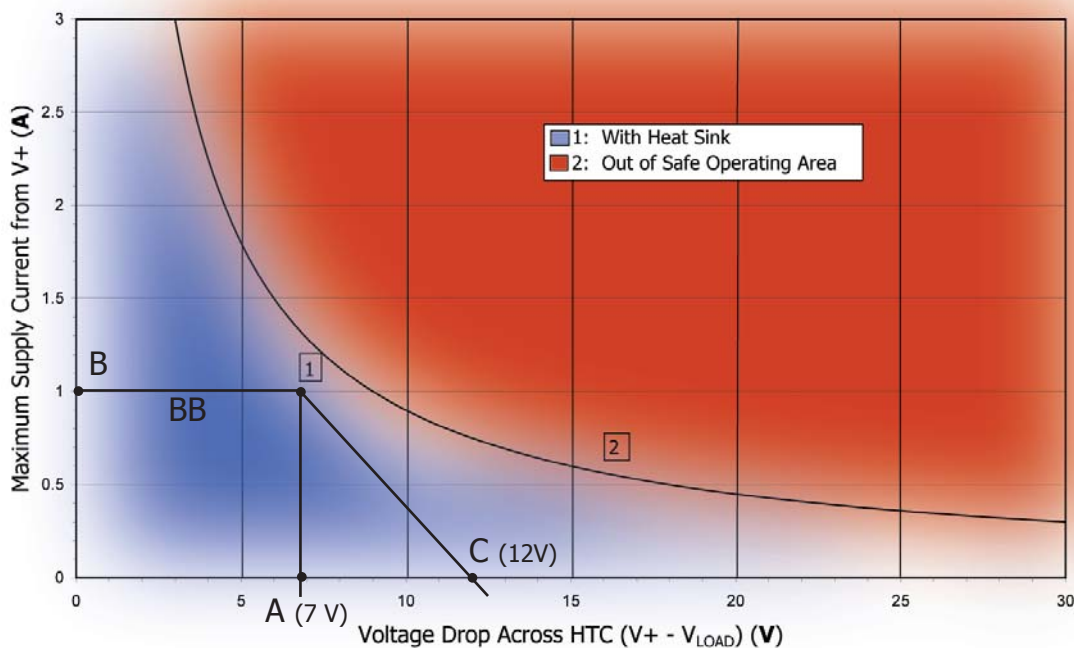


POWER SUPPLY AND NOISE

The HTC Series Temperature Controller is a linear controller designed for stable, low noise operation. We recommend using a regulated, linear supply for optimum performance. Depending on your requirements, you may be able to use a switching power supply. [A switching power supply will affect noise and stability.]

The recommended operating voltage is between +5 V and +12 VDC. The voltage available to the thermoelectric or resistive heater is the "Compliance Voltage." Compliance voltage varies with the input voltage. A compliance voltage of ± 10.7 V will be obtained with +12 volts input at 3 A. A compliance voltage of ± 3.7 V will be obtained with +5 V input and 3 A. +5 V operation will limit the setpoint voltage to 3.5 V, thus limiting the temperature range of the HTC. Higher input voltages can be used with special consideration. For higher compliance voltage operation contact the factory to discuss your application. [NOTE: Compliance voltage for Revision B was limited to ± 8 volts for +12V input.]

A heatsink is required to properly dissipate heat from the HTC mounting surface. Maximum internal power dissipation is 9 Watts.

GROUNDING

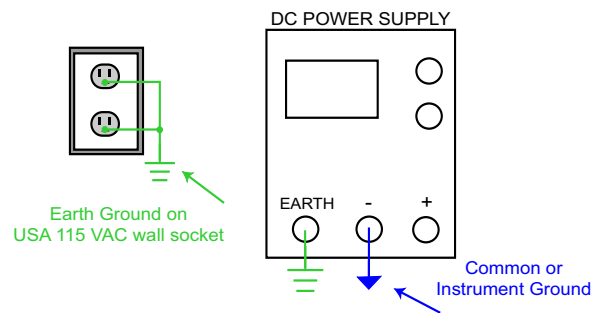


Unless Earth and Instrument Ground are connected via the power supply, Instrument Ground is floating with respect to Earth Ground

Special attention to grounding will ensure safe operation. Some manufacturers package devices with one lead of the sensor or thermoelectric connected to the metal enclosure or in the case of laser diodes, the laser anode or cathode.

WARNING: Precautions should be taken not to earth ground pins 11, 12, or 13. If any of these pins are earth grounded, then pins 5, 10, and 14 must be floating with respect to earth ground.

OPERATION WITH THERMOELECTRICS IN EIGHT QUICK STEPS


1 Output Current Bias - Pins 2 & 3

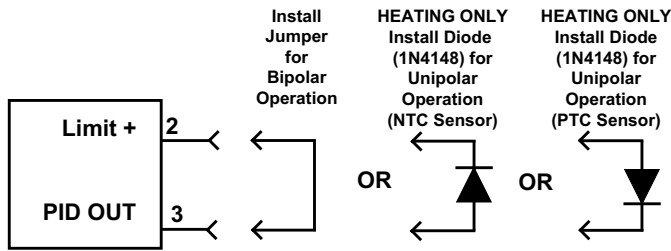

Thermistors are Negative Temperature Coefficient (NTC) sensors. A thermistor's resistance decreases with increasing temperature.

RTDs and IC Sensors are Positive Temperature Coefficient (PTC) sensors. A PTC sensor's resistance increases with increasing temperature.

2 Limit Output Current - Pins 1 & 2

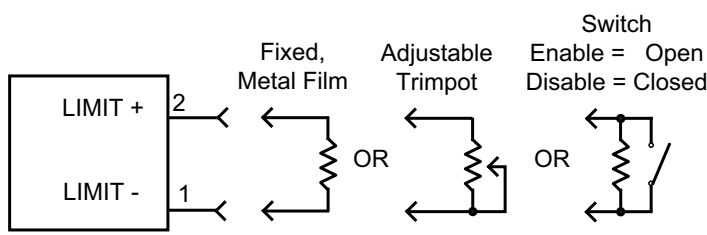

Use a trimpot no more than twice the calculated value of R_{LIMIT} for best resolution.

HTC-1500 with TE HTC-3000 with TE

$$R_{LIMIT} = \frac{20 \text{ k}\Omega}{\frac{4.5}{I_{LIMIT}} - 3}$$


| I_{LIMIT} | R_{LIMIT} |
|-------------|-----------------|
| 500 mA | 3.3 k Ω |
| 1 A | 13.3 k Ω |
| 1.5 A | 1 M Ω |

$$R_{LIMIT} = \frac{20 \text{ k}\Omega}{\frac{9}{I_{LIMIT}} - 3}$$

| I_{LIMIT} | R_{LIMIT} |
|-------------|-----------------|
| 1 A | 3.3 k Ω |
| 2 A | 13.3 k Ω |
| 3 A | 1 M Ω |

Equations for use with resistive heaters are found on page 12.

3 Sensor Bias Current - Pins 15 & 16

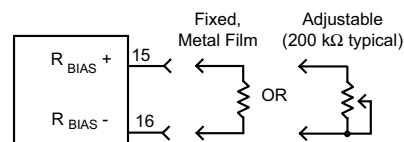

Use a trimpot no more than twice the calculated value of R_{BIAS} for best resolution.


R_{bias} determines the amount of current sourced to the sensor attached at pins 13 & 14. The chart indicates recommended currents for typical sensors. When using a voltage feedback sensor (such as an AD590), leave pins 15 & 16 open.

$$R_{BIAS} = \frac{1.225}{I_{BIAS}} - 122$$

| I_{BIAS} | R_{BIAS} |
|-------------|-----------------|
| 10 mA | 0 Ω |
| 1 mA | 1.1 k Ω |
| 100 μ A | 12.1 k Ω |
| 10 μ A | 122 k Ω |

| | 10 μ A | 100 μ A | 1 mA | 10 mA |
|------------|------------|-------------|------|-------|
| Thermistor | X | X | | |
| RTD | | | X | X |
| LM335 | | | X | |


4 Sensor - Pins 13 & 14

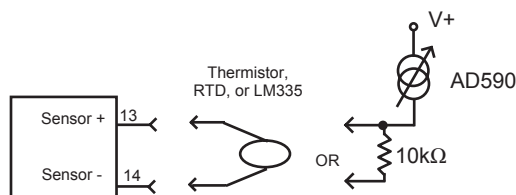

Virtually any type of temperature sensor can be used with the HTC. It must produce a feedback voltage between 0.25 V and (V₊ minus 2 V). See Step #3 (R_{bias}) to set the amount of bias current to the sensor.

$$I_{BIAS} = \frac{V_{SETPOINT}}{\text{Sensor Resistance}}$$

5 Proportional Gain - Pins 17 & 18

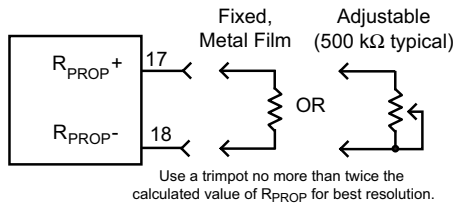


$$R_{PROP} = \frac{500 \text{ k}\Omega}{\text{GAIN}} - 5 \text{ k}\Omega$$

| GAIN | R _{PROP} |
|------|-------------------|
| 1 | 495 kΩ |
| 50 | 5 kΩ |
| 100 | 0 Ω |

R_{prop} sets the gain of the system from 1 to 100. A larger proportional gain can help minimize the time to settling but may destabilize loads with long intrinsic lag times. Too low a gain may result in oscillations about setpoint. For most applications, a gain of 33 works. Change the proportional gain while the output is OFF.

6 Integrator Time Constant - Pins 19 & 20

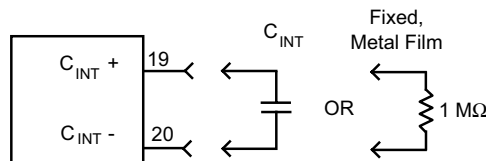


$$C_{INT} = \frac{T_{INT}}{1 \text{ M}\Omega}$$

| T _{INT} | C _{INT} |
|------------------|------------------|
| 0 (OFF) | 1 MΩ |
| 1 second | 1 μF |
| 5 seconds | 5 μF |
| 10 seconds | 10 μF |

C_{int} sets the integral time constant of the system from 0 to 10 seconds. Use a capacitor with Dissipation Factor less than 1% for best performance. These typically include metallized film polyester, polypropylene & some ceramic capacitors. Capacitors with Dissipation Factors >1% (typically electrolytic, tantalum, and ceramic) will cause drift in the Integrator circuit. To disable the integrator, use a 1 MΩ resistor across pins 19 & 20.

7 Temperature Setpoint - Pins 8 & 5 (Pin 4 optional)

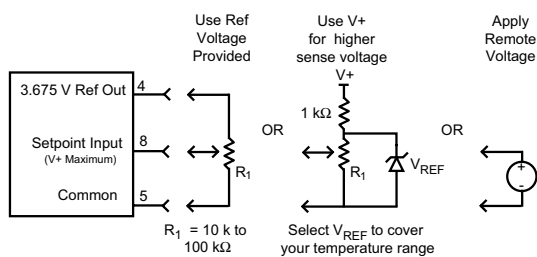


The setpoint temperature depends on the voltage applied to pin 8 and your sensor. The setpoint is the voltage your sensor produces at the desired temperature.

Example:
Desired Temperature: 25°C
Sensor: 10 kΩ thermistor
Resistance at 25°C: 10 kΩ
Bias Current: 100 μA
V_{SET} = 10 kΩ * 100 μA = 1 V


Monitor setpoint with a DVM at pins 7 & 5 or actual sensor voltage across pins 6 & 5.

8 TE Module & Output Current Measurement - Pins 11 & 12

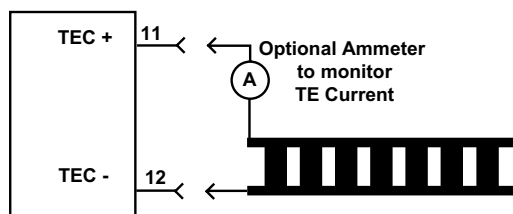

Hook up the TE module and an ammeter if you want to monitor TE current. Current flows from positive to negative when the HTC is cooling with an NTC temperature sensor. When using an LM335, AD590, RTD, or other PTC sensor, reverse the polarity of the leads (i.e. connect the positive lead of the TE module to TEC- and the negative lead of the TE module to TEC+).

OPERATION OF HTC PCB

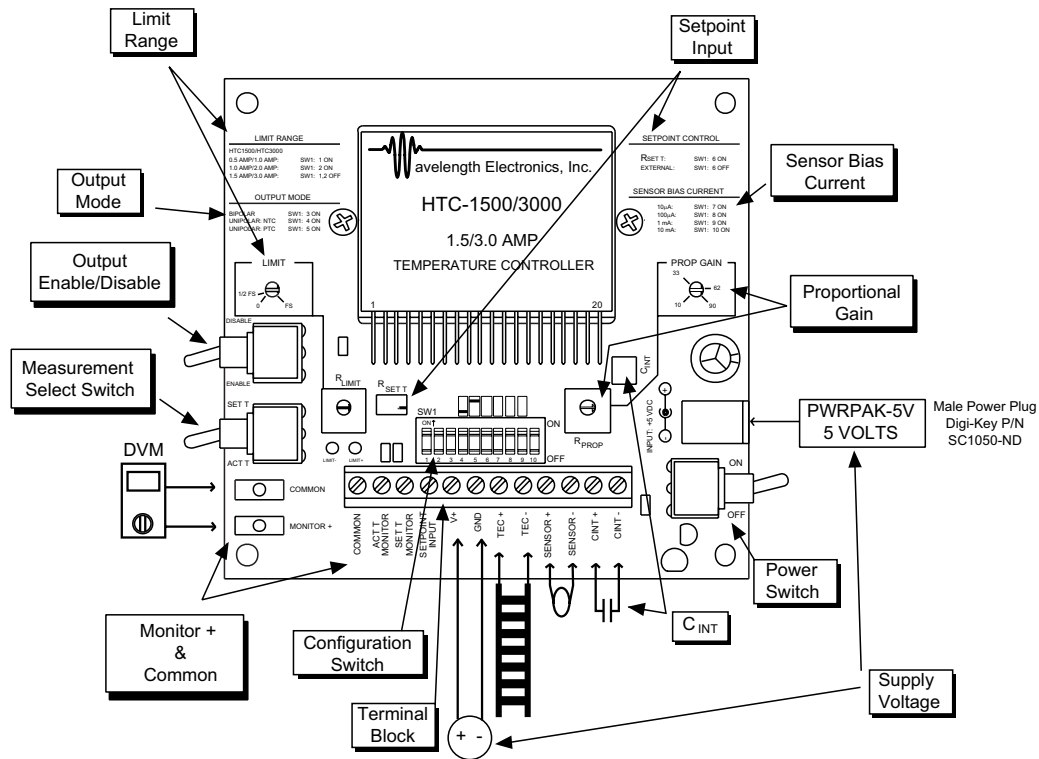

To Install the HTC on the Evaluation Board with HTC Heatsink

1. Feed the HTC pins through the large opening in the Evaluation board so that the HTC pins are on the top side of the Evaluation board and the mounting tabs are against the back side of the board. NOTE: Do not bend the HTC pins.
2. Line up the heatsink holes behind the HTC and insert the screws through the Evaluation board and HTC unit into the tapped heatsink holes.
3. Line up the HTC pins on the solder pads on the Evaluation board and tighten the screws.
4. Solder the HTC pins to the solder pads. NOTE: Do not exceed 700°F soldering temperature for more than 5 seconds on any pin.

Terminal Block

 
Wire your thermoelectric module (or resistive heater) and sensor via this 12 contact screw terminal connector. Connect an external setpoint voltage input here, also. Various other signals are available at other points on the PCB as well as on the terminal block: Actual and Setpoint monitors, Integrator Time Constant Capacitor, and Supply Voltage.

We recommend using a minimum of 22 AWG wire to the thermoelectric.

Configuration Switch - SW1

The Configuration Switch selects the OUTPUT MODE, LIMIT RANGE, SETPOINT INPUT, and SENSOR BIAS CURRENT. Before applying voltage to the HTC PCB, check the switch settings for proper configuration.

The FACTORY DEFAULT settings are:



Limit Range: Lowest
(SW1:1 ON, SW1:2 OFF)

Bipolar Operation:
(SW1:3 ON, SW1:4 & 5 OFF)


Onboard Trimpot Control: (SW1:6 ON)

100µA Sensor Bias Current:
(SW1:7, 9, & 10 OFF, SW1:8 ON)

The following page details the switch settings.

LIMIT RANGE

For best results, set R_{LIM} trimpot fully clockwise and use current limit switches.

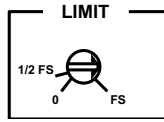

Switch positions 1 & 2 set the "full scale" value to one of three current ranges. Select a range that includes your maximum operating current:

| HTC-1500 | HTC-3000 | SW1: 1 | SW1:2 |
|-----------|----------|--------|-------|
| 0 - 0.5 A | 0 - 1 A | ON | OFF |
| 0 - 1 A | 0 - 2 A | OFF | ON |
| 0 - 1.5 A | 0 - 3 A | OFF | OFF |

If you want to accurately measure the output current to the TE module, hook up an ammeter in series with the TE module as described on page 8, step 8 of the datasheet.

OUTPUT MODE

The HTC can be configured for bipolar or unipolar operation. The position of switches 3, 4, and 5 determine the operating mode. See page 7, step 1 for a discussion of NTC and PTC sensors.

| OUTPUT BIAS | SW1: 3 | SW1: 4 | SW1:5 |
|------------------------|--------|--------|-------|
| Bipolar NTC/PTC | ON | OFF | OFF |
| Heating, Unipolar: NTC | OFF | ON | OFF |
| Heating, Unipolar: PTC | OFF | OFF | ON |

SETPOINT INPUT

The temperature setpoint can be controlled by the onboard R_{SET T} trimpot or with an external input voltage on the terminal block (SETPOINT INPUT). Switch position 6 determines how the setpoint is controlled.

| Temperature Setpoint | SW1:6 |
|------------------------------------|-------|
| Onboard R _{SET T} Trimpot | ON |
| Remote SETPOINT INPUT | OFF |

SENSOR BIAS CURRENT

Choosing the correct bias current for your sensor is important. Based on the resistance vs. temperature characteristics of your sensor, select a bias current that gives you a voltage feedback greater than 0.25 V and two volts less than V+.

| BIAS CURRENT | SW1:7 | SW1:8 | SW1: 9 | SW1:10 | Recommended for: |
|--------------|-------|-------|--------|--------|------------------------|
| 10 μA | ON | OFF | OFF | OFF | Thermistors |
| 100 μA | OFF | ON | OFF | OFF | Thermistors |
| 1 mA | OFF | OFF | ON | OFF | RTDs & LM335 IC Sensor |
| 10 mA | OFF | OFF | OFF | ON | RTDs |
| 0 mA | OFF | OFF | OFF | OFF | AD590 |

PROPORTIONAL GAIN

Begin with a proportional gain of 33 (factory default). The temperature vs. time response of your system can be optimized for overshoot and settling time by adjusting the R_{PROP} trimpot between 10 and 90. Increasing the gain will dampen the output (longer settling time, less overshoot). For more information on PID controllers, see Technical Note TN-TC01- Optimizing Thermoelectric Temperature Control Systems (<http://www.teamwavelength.com/downloads/notes/tn-tc01.pdf#page=1>).

SUPPLY VOLTAGE

A DC voltage can be applied via the PWRPAK-5V input connector or the terminal block connections labeled V+ and GND. **USE ONLY ONE INPUT to supply power to the HTCPCB.**

C_{INT}

A 1μF capacitor is mounted on the PCB as shown and will give you a one second integrator time constant. By adding capacitance across the C_{INT+} and C_{INT-} inputs on the terminal block, you can increase the integrator time constant. See page 8, step 6 for more information. Use only capacitors with a dissipation factor less than 1%. For more information on PID controllers, see Technical Note TN-TC01 - Optimizing Thermoelectric Temperature Control Systems (<http://www.teamwavelength.com/downloads/notes/tn-tc01.pdf#page=1>).

POWER SWITCH

This switch enables or disables the DC voltage from either the PWRPAK-5V input connector or the terminal block connections labeled V+ and GND. The green LED will light when power is applied to the HTCPCB and the switch is "ON".

MONITOR + and COMMON



With a DVM connected to MONITOR + and COMMON, toggle the Measurement Select Switch to measure SET T (setpoint temperature) or ACT T (actual temperature). If these test points are not used, SET T and ACT T can be measured via the ACT T and SET T MONITORS (referenced to COMMON) on the terminal block.

OUTPUT ENABLE / DISABLE

When DC power is applied to the HTCPCB, the output current can be enabled or disabled by toggling this switch.

HTC PCB Schematic


HTC EVALUATION BOARD

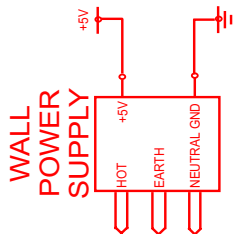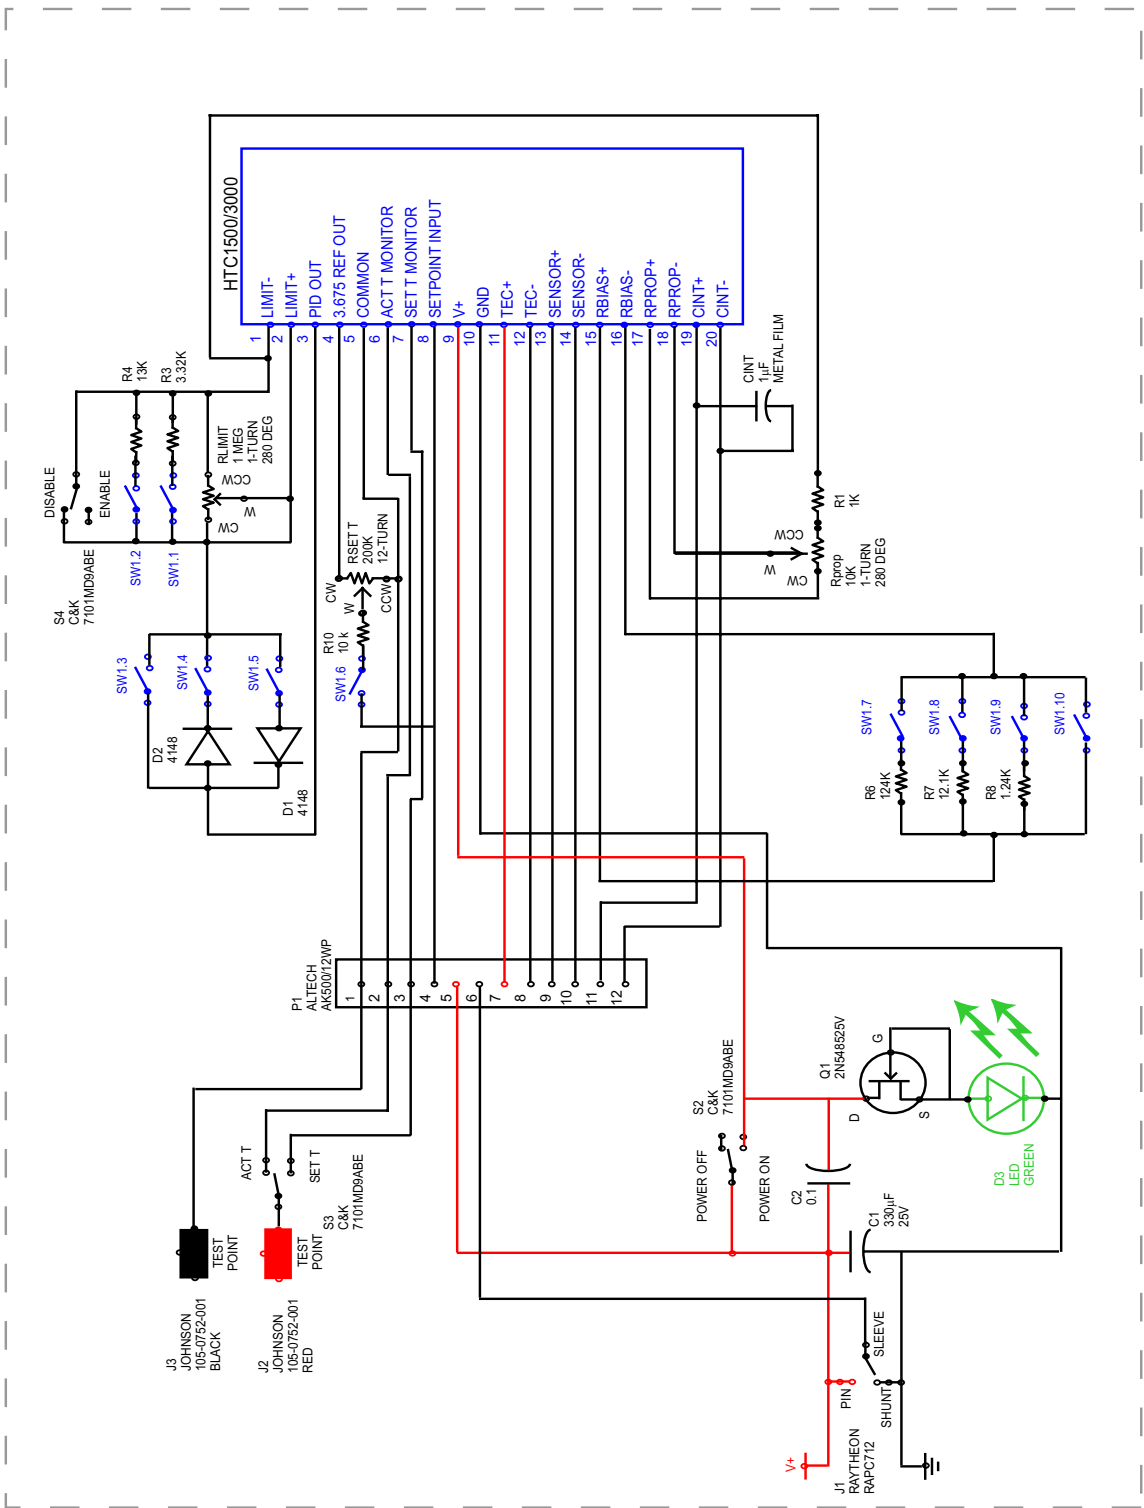

HTC-1500 / HTC-3000 TEMPERATURE CONTROLLERS

OPERATION WITH RESISTIVE HEATERS

Operating the HTC with resistive heaters is very similar to operating the HTC with thermoelectric modules. Use low resistance heaters (< 25 Ω) for maximum power output. Resistances greater than 100 Ω may limit the output voltage, and therefore power, slowing down temperature changes.

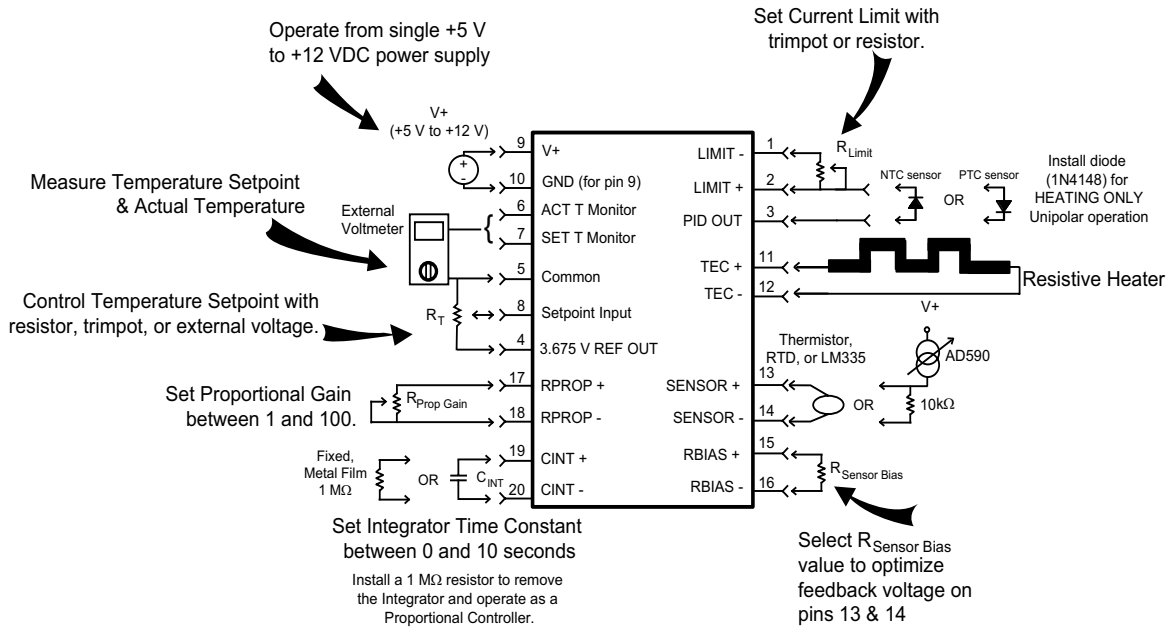

Follow the operating instructions for thermoelectrics on pages 7 & 8 with these changes:

1. The output current maximum is reduced to 1 A with the HTC-1500 and 2 A with the HTC-3000. Calculate the LIMIT OUTPUT resistance with these equations:

$$\text{HTC-1500} \quad R_{\text{LIMIT}} = \frac{20 \text{ k}\Omega}{\frac{3.0625}{I_{\text{LIMIT}}} - 3}$$

$$\text{HTC-3000} \quad R_{\text{LIMIT}} = \frac{20 \text{ k}\Omega}{\frac{6.125}{I_{\text{LIMIT}}} - 3}$$

2. Attach the resistive heater to Pins 11 & 12 (TEC+ & TEC-).
3. Depending on your selection of NTC or PTC sensor, attach a blocking diode as shown on page 7, step 1. DO NOT OPERATE IN BIPOLAR MODE WITH RESISTIVE HEATERS.

NOTE: Contact the factory for voltage operation above +12 V.

Resistive Heater Voltage vs. Current for HTC3000 Revision C & Later (25°C ambient)


| V _S = 5V | | |
|---------------------|--------------------|--------------------|
| Resistance (Ohms) | Compliance (Volts) | Max Current (Amps) |
| 2 | 4.18 | 1.93 |
| 3 | 4.45 | 1.36 |
| 4 | 4.57 | 1.10 |
| 5 | 4.59 | 0.85 |
| 6 | 4.60 | 0.74 |
| 7 | 4.65 | 0.64 |
| 8 | 4.69 | 0.57 |
| 10 | 4.70 | 0.48 |
| 11 | 4.72 | 0.43 |
| 12 | 4.73 | 0.39 |
| 14 | 4.76 | 0.34 |
| 16 | 4.80 | 0.30 |
| 18 | 4.82 | 0.27 |

| V _S = 12V | | |
|----------------------|--------------------|--------------------|
| Resistance (Ohms) | Compliance (Volts) | Max Current (Amps) |
| 6 | 11.44 | 1.80 |
| 7 | 11.47 | 1.58 |
| 8 | 11.56 | 1.40 |
| 10 | 11.70 | 1.15 |
| 11 | 11.74 | 1.06 |
| 12 | 11.82 | 0.98 |
| 14 | 11.88 | 0.84 |
| 16 | 11.94 | 0.74 |
| 18 | 11.97 | 0.66 |

USING A CONNECTOR WITH THE HTC


The HTC leads are meant to solder into a circuit board. If you want to use a connector, we recommend the following:

| Qty | Description | Molex Part Number |
|-----|---|-------------------|
| 1 | Molex Crimp Terminal Housing 20 pin (High Pressure) | 10-11-2203 |
| 20 | Molex Crimp Terminal 7879 (High Pressure) | 08-55-0129 |

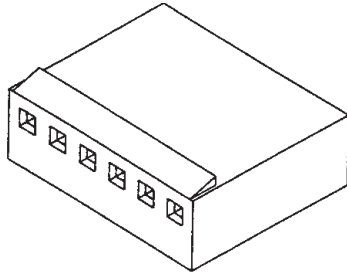

Molex Crimp Terminal Housing 20 pin (High Pressure)
(only 6 pins shown)

 
20 pin Molex Part Number: **10-11-2203**
L x W = 2.02" x .51" (51.3 mm x 12.9 mm)



Molex Crimp Terminal 7879 (High Pressure)
for wire size 22 - 30 AWG, Select Gold Plating

Molex Part Number: **08-55-0129**
L x W = 0.44" x 0.76" (11.2 mm x 1.93 mm)


MECHANICAL SPECIFICATIONS -- HEATSINK

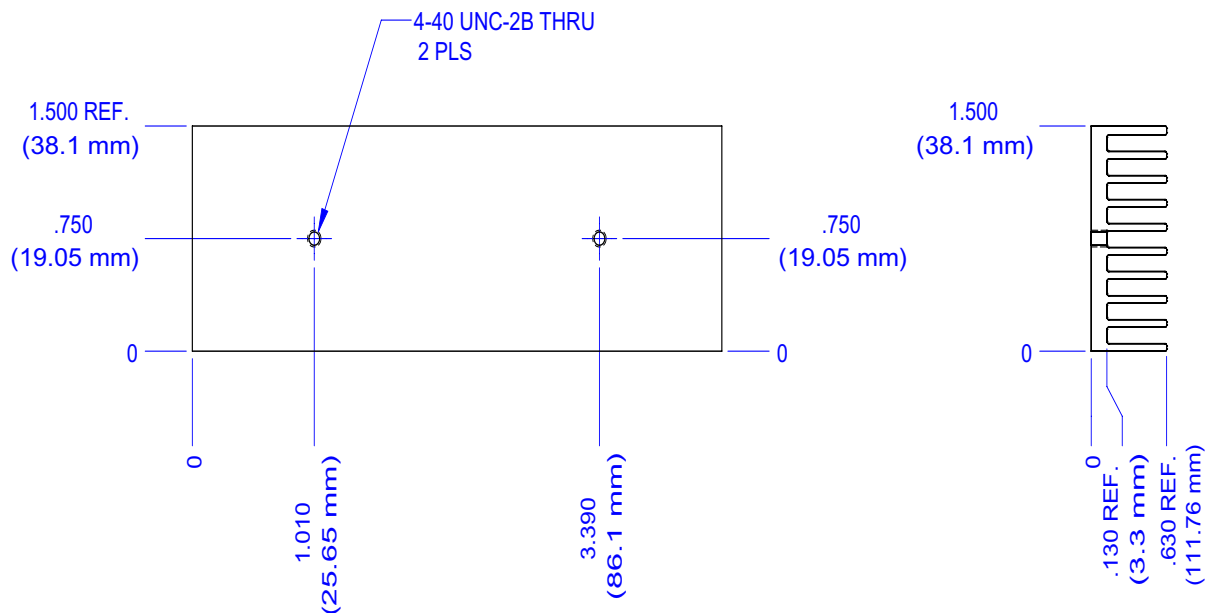


All Tolerances are ±5%

MECHANICAL SPECIFICATIONS -- HTC

HTC-1500 / HTC-3000 TEMPERATURE CONTROLLERS

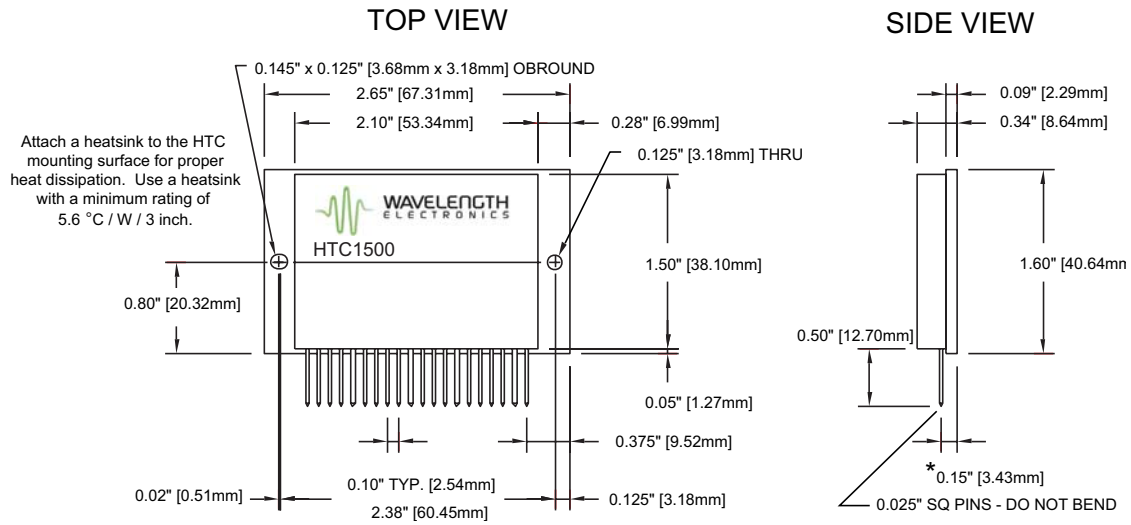

* Use 0.032" to 0.62" thick PCB substrate when mounting your HTC in the style used on the evaluation board.

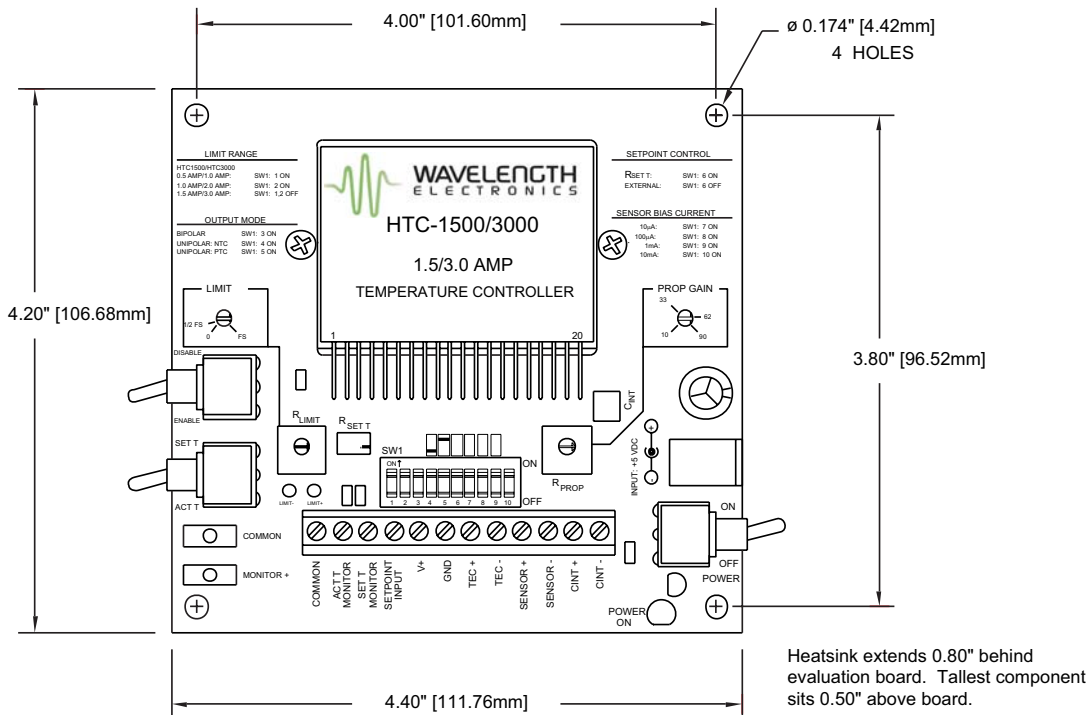

All Tolerances are ±5%

HTC1500/3000: PCB & HEATSINK MOUNTING


To mount the HTC Series Hybrid Temperature Controllers HTC-1500 and HTC-3000 to their heatsinks and optional evaluation PCBs, refer to the drawings and instructions below:

MOUNTING INSTRUCTIONS


Begin by applying thermal grease to the back of the HTC to ensure good thermal contact. We recommend Wavelength Electronics part number THERM-PST.



If the HTC evaluation PCB is to be used, feed the pins of the HTC through the cut-out in the evaluation PCB, so that the pins line up with the solder pads on the board with the flanges of the HTC on the other side of the PCB. Line up the screw holes on the evaluation PCB, the HTC flanges, and the heatsink. Attach with the supplied screws. Once the screws are in place, the HTC can be soldered to the evaluation PCB. Solder each HTC pin to its corresponding pad, taking special care not to short across any of the solder pads or bend any pins.

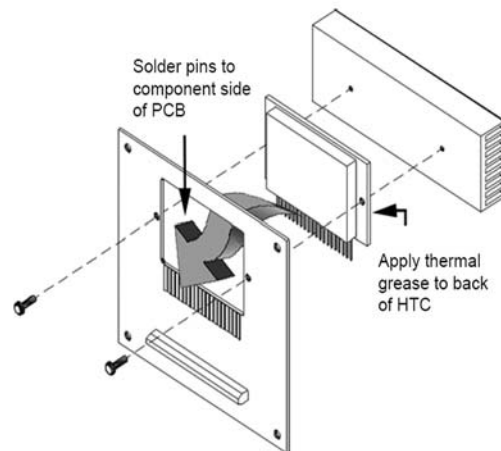

If the HTC is to be used without the evaluation PCB, apply the thermal grease as directed, line up the screw holes in the HTC and heatsink and attach with the supplied screws. Connect the HTC pins to your system by soldering them to the appropriate leads.

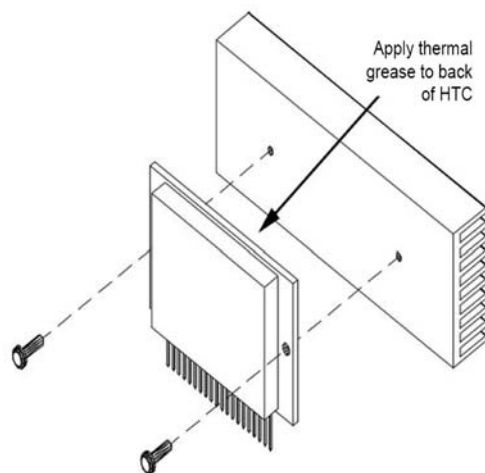

CERTIFICATION:

Wavelength Electronics, Inc. (Wavelength) certifies that this product met it's published specifications at the time of shipment. Wavelength further certifies that its calibration measurements are traceable to the United States National Institute of Standards and Technology, to the extent allowed by that organization's calibration facilities, and to the calibration facilities of other International Standards Organization members.

WARRANTY:

This Wavelength product is warranted against defects in materials and workmanship for a period of 90 days from date of shipment. During the warranty period, Wavelength will, at its option, either repair or replace products which prove to be defective.

WARRANTY SERVICE:

For warranty service or repair, this product must be returned to the factory. An RMA is required for products returned to Wavelength for warranty service. The Buyer shall prepay shipping charges to Wavelength and Wavelength shall pay shipping charges to return the product to the Buyer upon determination of defective materials or workmanship. However, the Buyer shall pay all shipping charges, duties, and taxes for products returned to Wavelength from another country.

LIMITATIONS OF WARRANTY:

The warranty shall not apply to defects resulting from improper use or misuse of the product or operation outside published specifications.

No other warranty is expressed or implied. Wavelength specifically disclaims the implied warranties of merchantability and fitness for a particular purpose.

EXCLUSIVE REMEDIES:

The remedies provided herein are the Buyer's sole and exclusive remedies. Wavelength shall not be liable for any direct, indirect, special, incidental, or consequential damages, whether based on contract, tort, or any other legal theory.

NOTICE:

The information contained in this document is subject to change without notice. Wavelength will not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Wavelength.

SAFETY:

There are no user serviceable parts inside this product. Return the product to Wavelength for service and repair to ensure that safety features are maintained.

LIFE SUPPORT POLICY:

As a general policy, Wavelength Electronics, Inc. does not recommend the use of any of its products in life support applications where the failure or malfunction of the Wavelength product can be reasonably expected to cause failure of the life support device or to significantly affect its safety or effectiveness. Wavelength will not knowingly sell its products for use in such applications unless it receives written assurances satisfactory to Wavelength that the risks of injury or damage have been minimized, the customer assumes all such risks, and there is no product liability for Wavelength. Examples of devices considered to be life support devices are neonatal oxygen analyzers, nerve stimulators (for any use), auto transfusion devices, blood pumps, defibrillators, arrhythmia detectors and alarms, pacemakers, hemodialysis systems, peritoneal dialysis systems, ventilators of all types, and infusion pumps as well as other devices designated as "critical" by the FDA. The above are representative examples only and are not intended to be conclusive or exclusive of any other life support device.

| REVISION HISTORY | | |
|------------------|-----------|--|
| REVISION | DATE | NOTES |
| REV. H | 28-Jul-09 | Record ON & OFF ambient stability improvements to coincide with release of Rev. E product. |
| REV. I | 31-Aug-09 | Updated links to support new website |



WAVELENGTH ELECTRONICS, INC.

51 Evergreen Drive
Bozeman, Montana, 59715
web: www.teamwavelength.com

phone: (406) 587-4910 Sales/Tech Support
fax: (406) 587-4911
e-mail: sales@teamwavelength.com